




# Operating Instructions

863 Valley View Road, Eighty Four, PA 15330 USA

Tel: 724-941-9701 • [www.skccinc.com](http://www.skccinc.com)

## Cassette/Cyclone Holder Cat. No. 225-1

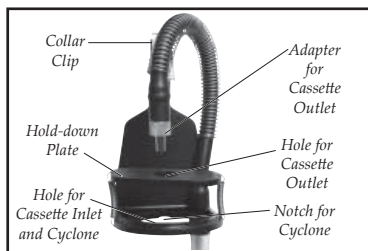

### Operation

#### Inserting two or three-piece 37-mm Cassette Without Cyclone

Pull back spring-loaded hold-down plate and place loaded cassette inlet side down over the large hole. Position small hole in plate over cassette outlet. Insert adapter on rubber tubing through the hold-down plate and into cassette outlet.



#### Inserting Cassette with Cyclone (25 and 37-mm Cassettes assembled with cyclone)

Insert stem of cyclone through large hole in holder and secure cassette as described above. Insert the small round nodule on the cyclone rim into the notch in the filter cassette holder.



#### Inserting two or three-piece 25-mm Cassette Without Cowl

Insert cassette into supplied O-ring and position O-ring at the joint between cassette sections. Position cassette in holder as described above.



#### Inserting 25-mm Cassette with Cowl (Asbestos Cassette)

Remove inlet section. Insert cowl into supplied O-ring and position O-ring at the joint between cassette and cowl. Insert cowl through large hole in holder until the O-ring contacts the holder. Attach cassette to holder as described above.



### SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to [www.skccinc.com/warranty](http://www.skccinc.com/warranty).

Form 3718 Rev 1906