



Precautions

Use the instrument ONLY on voltage free and grounded equipment. Failure to observe this rule may cause fatal injury and/or material damage.

The surface you are going to check for leaks must be free of all liquids like oil or water, and coarse dirt. If necessary, wipe it with a cloth before approaching it with the sensor tip. The ingress of liquids will immediately destroy the SmartSensor, while grease and similar substances, even in small quantities, will obstruct the sample inlet.

1. Open the Case.



2. Press firmly on the top of the P1 XT Handgun to release the docking station to the working position.





SF6 Leakcheck P1 XTL

Quick start guide

3. The instrument will slide out in the working position.



4. Wait for any action until working position. Take one P1 SmartSensor out of the storage bay.



5. Attach the P1 SmartSensor into the plug at the handgun before you switch the instrument on.



6. To switch the instrument ON press the left button on the Handgun shortly.



7. The P1 XT will start in “SEARCH MODE” or “MEASUREMENT MODE” whatever was used before.



8. To change from “SEARCH MODE” to “MEASUREMENT MODE” and back again swipe your finger over the display from left to right.



9. To set the measured value to Zero press right button shortly.

